




MINI "O" SHOWER ROD INSTALLATION INSTRUCTIONS

TOOLS REQUIRED FOR INSTALLATION:

- Electric drill
- Masking tape
- Screw driver

INSTALLATION:

1. Mark, drill and fix the bracket with the screws and rawplugs supplied.

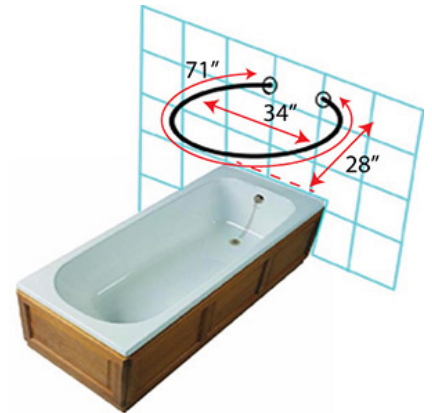

2. Slide flange into the wall brackets. Install screws - tighten in place.
3. Slide shower rod into the swivel flange - tighten set screws.