

## SUSPENDED CURVED SHOWER ROD INSTALLATION INSTRUCTIONS

### TOOLS REQUIRED FOR INSTALLATION:

- Electric drill
- Measuring tape
- Masking tape
- Screw driver
- Hacksaw

### INSTALLATION:

1. Decide on the desired length of your shower rod and trim using either a hacksaw or 1" tubing cutter.
2. Assemble the corner piece and tighten the two grub screws with the allen key provided.
3. Hold the Crescent Rod shaped rod up against the walls and ceiling as per Diagram 1 and mark the position of the point where the Crescent Rod touches the wall on your newly marked horizontal line with a pencil "a".
4. Fix masking tape to the area where you will fix the first bracket "a" and carefully mark and drill the two holes. Add the rawplugs and fix the bracket to wall.
5. Insert assembled rod into the wall bracket "a" then check that the rod is level using a spirit level and mark position of the second bracket "b" on ceiling.
6. Carefully drill the holes and add the rawplugs (**Note: You may need extra bracing in your ceiling space to screw into**)
7. Slide remaining bracket onto the ceiling rod and then push the opposite end of the rod into bracket "a". Slide second bracket to ceiling and fix "b".
8. Tighten the allen screws on both brackets with the allen key provided to finish your installation.


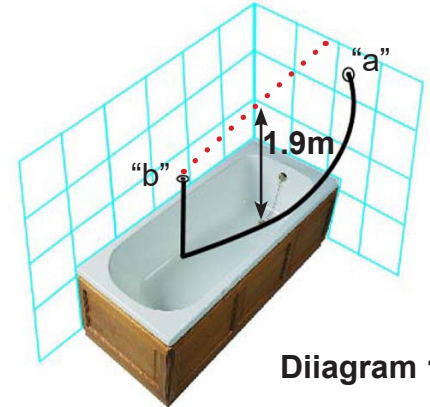


Diagram 1

- Tape up area with masking tape
- Mark & drill holes
- Add rawplugs & fix bracket to tiled wall and ceiling

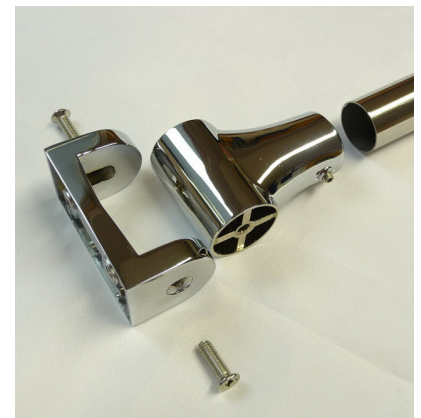

- Ensure rod is level and straight
- Mark new bracket and repeat above procedure then fix rod in place