

SUSPENDED CURVED SHOWER ROD INSTALLATION INSTRUCTIONS

TOOLS REQUIRED FOR INSTALLATION:

- Electric drill
- Measuring tape
- Screw driver
- Hacksaw

INSTALLATION:

1. Decide on the desired length of your shower rod and trim using either a hacksaw or 1" tubing cutter.
2. Assemble the corner piece and tighten the two grub screws with the allen key provided.
3. Hold the completed Crescent Rod shaped rail up against the ceiling as per Diagram 1 and mark the position of the point where the Crescent Rod brackets touch the ceiling "a" and "b".
4. Drill the fixing holes, insert rawplugs and fix the brackets to the ceiling.
5. Insert assembled rail into the wall brackets, then check that the rail is level.
6. Tighten the allen screws on both brackets with the allen key provided.

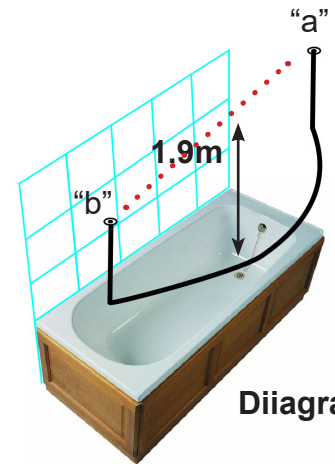


Diagram 1

- **Mark & drill holes using an 8mm masonry drill on ceiling**
- **Add rawplugs & fix bracket to ceiling**



- **Ensure rod is level and straight**
- **Mark new brackets and then fix rail in place on ceiling.**