



CONTEMPORARY BRACKET INSTALLATION INSTRUCTIONS

STEP 1

- 1. Determine your desired location for installation and make a mark for the location of the mounting plate.
- 2. Remove mounting plate from backplate by loosening set screw in backplate. Place center hole of mounting plate over mark made above.
- 3. Make 2 marks where mounting screws will be placed. Drill hole at each of the marks. (You may substitute other style mounting anchors or screws if desired).
- 4. Place anchors into the holes made. Place mounting plate over holes and secure to mounting surface using screws.

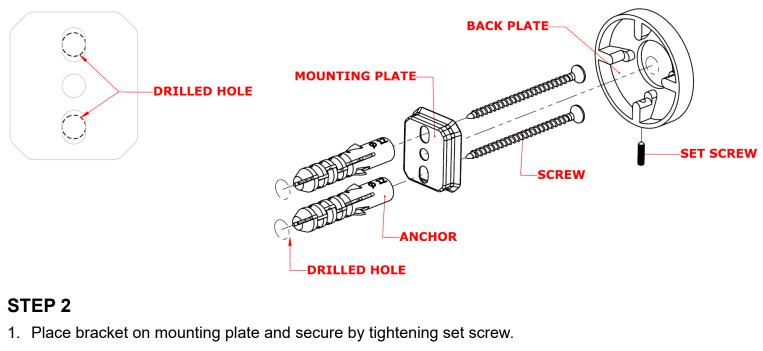

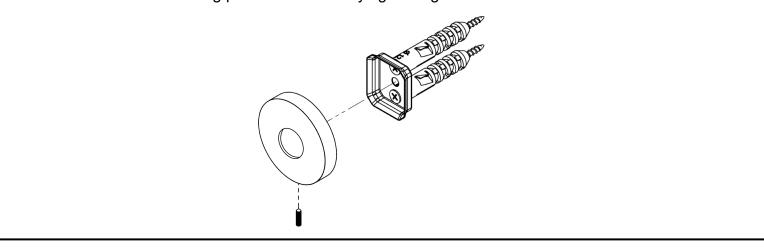


www.showerrods.com

information@showerrods-etc.com

www.showerrods-etc.com

407.554.1400 Mon - Fri | 8a - 5p ET

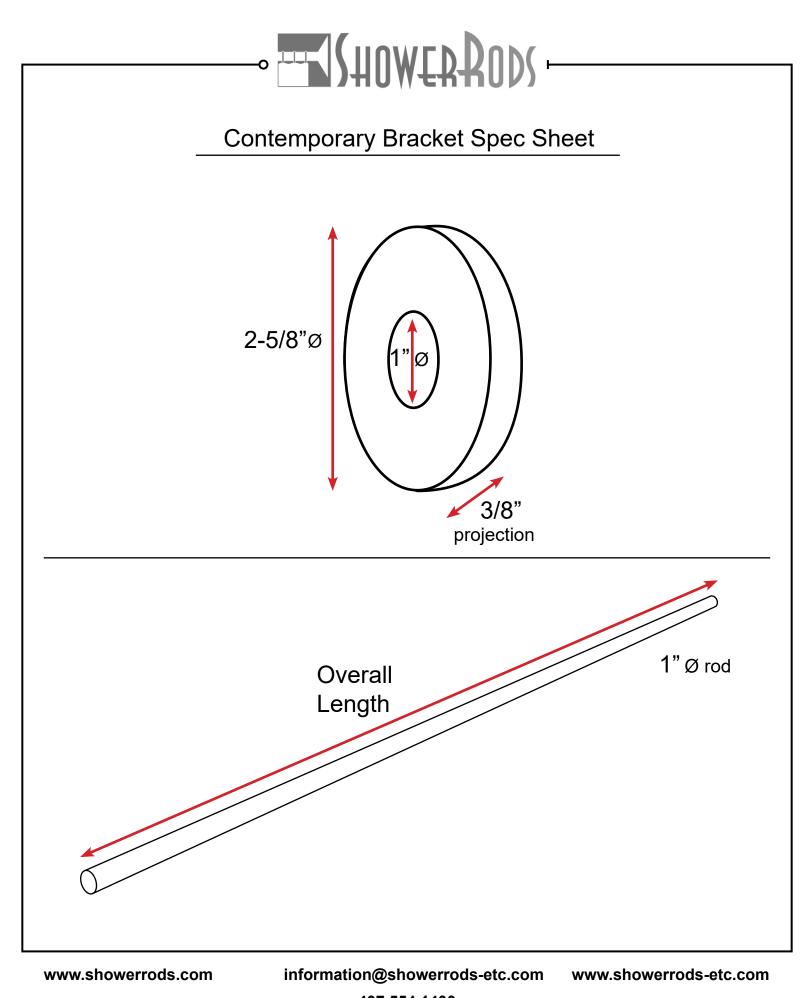

407.554.1400 Mon - Fri | 8a - 5p ET