




## D-Shaped Shower Rod Installation Instructions

### CONTENT

- (4) Rods (2 corners & 1 straight)
- (2) Heavy Duty Flanges (all mounting screws included)
- (2) 36" Ceiling Support (all mounting hardware included)
- (2) Inserts
- (2) Rod Loop Connectors

1. Position **Round Brackets** on desired location on the wall and mark for the screws - drill holes and insert plastic anchors. Repeat for **Ceiling Support Brackets**.
2. For maximum support on all set screws:
  - Position brackets at the end of each corner rod, and slide "O" loop in the center.
  - Mark location of set screw holes and remove brackets and loop.
  - Drill slightly smaller hole into the rod where it was marked.
  - Assemble brackets and loop back and tighten all set screws into the rod.
3. Trim **Ceiling Supports** to desire length. Fasten Support Rods into Ceiling Support Brackets, and tighten "O" loop set screw onto ceiling support.
4. Use insert to connect all 3 rods. Connect and tighten Rods into Loop Connectors.
5. With the help on another person, place assembled D-Rod on marked location and screw the Round Brackets into the wall and Ceiling Support Brackets into the ceiling.

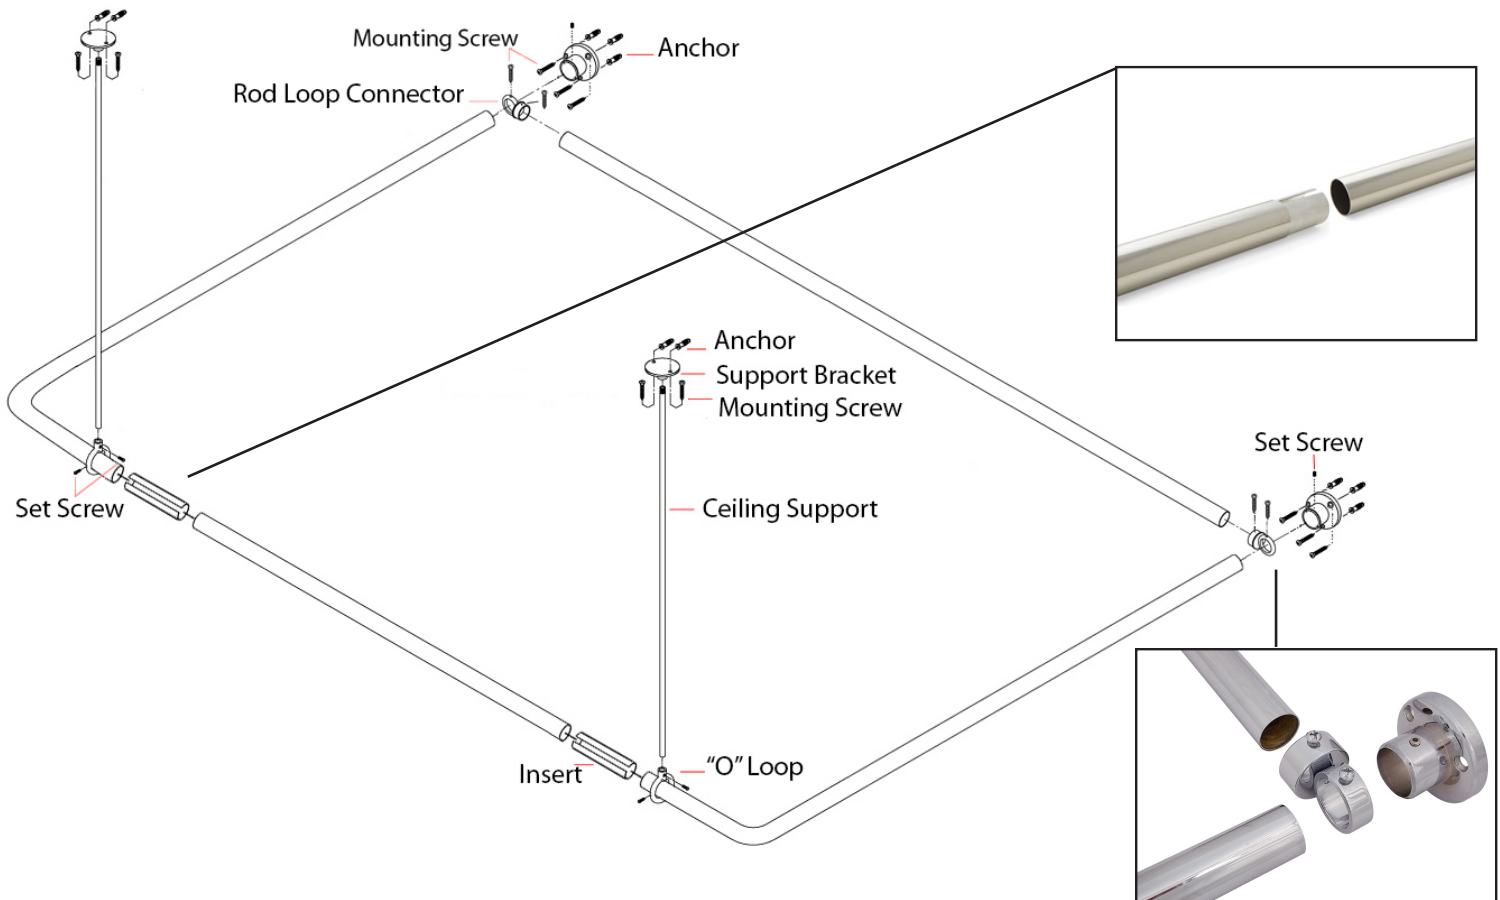

[www.showerrods.com](http://www.showerrods.com)

[info@showerrods.com](mailto:info@showerrods.com)

407.554.1400

Mon - Fri | 8a - 5p ET