




HEAVY DUTY CEILING SUPPORT INSTALLATION INSTRUCTIONS

CONTENT

- (1) Ceiling Rod
- (1) O-loop
- (1) Ceiling Bracket
- (3) Mounting Screws
- (3) Anchors
- (3) Set Screws

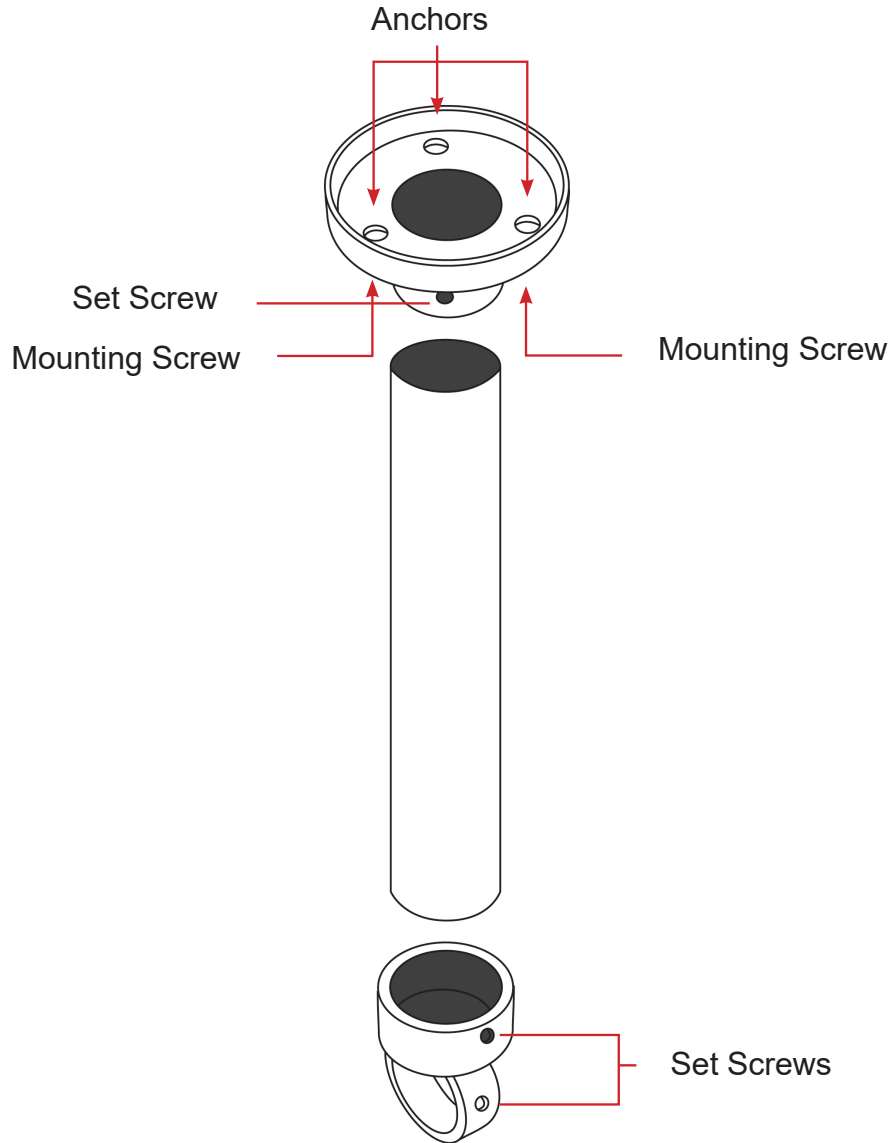

For extra strength, it is recommended to “drill and tap” set screws into both support and shower rod. Take set screws out and mark the location on the rods. Drill holes that are slightly smaller. When screw is installed, tighten it all the way into the rod.